


NOTE:  
SEE BRUSH LAYERING DETAIL FOR PLACEMENT.

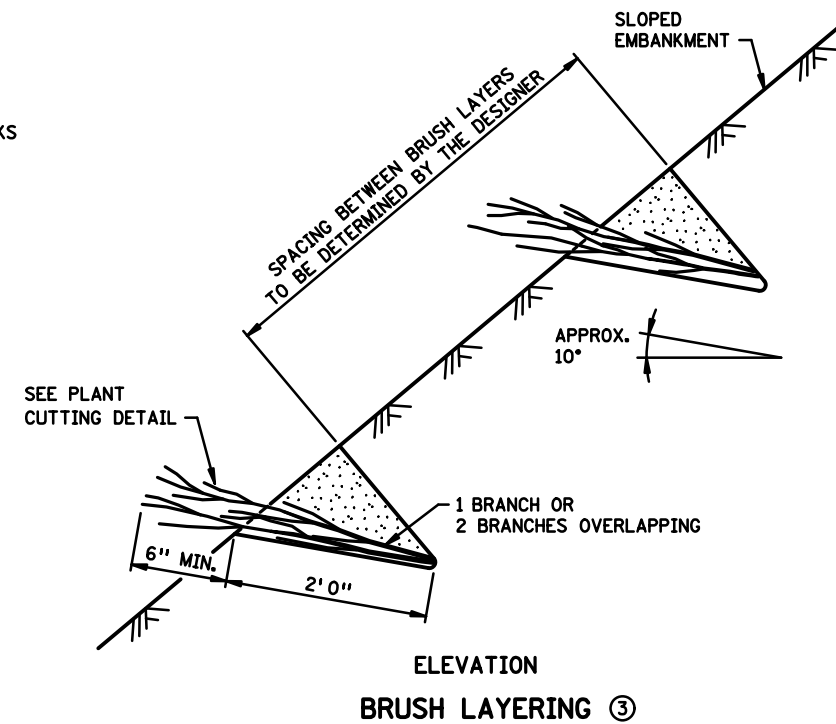

**NOTES:**

SEE SPECS. 2577 & 3897.

- ① PLANT CUTTINGS SHOULD BE DORMENT, BEFORE LEAF-OUT OR AFTER LEAF DROP. TRANSPORT AND STORE LIVE STAKES & CUTTINGS IN WATER.
- ② TO PLACE LIVE STAKES IN RIPRAP, USE PRY BAR TO MAKE PILOT HOLE. NOT ALWAYS NECESSARY TO HAVE PILOT HOLE WHEN RIPRAP NOT PRESENT.
- ③ IN PLAN VIEW, THE BRUSH LAYERING AND WATTLE INSTALLATION WILL BE IN CONTINUOUS TRENCHES FOLLOWING A CONTOUR.

LEAD EXPERT OFFICE  
LYNN CLARKOWSKI  
CHIEF ENVIRONMENTAL OFFICER  
OFFICE OF ENVIRONMENTAL STEWARDSHIP



PERMANENT SEDIMENT CONTROL  
BIOENGINEERING SOIL STABILIZATION

APPROVED: 08-06-2014  
REVISED:

*Christopher Roy*  
CHRISTOPHER ROY  
STATE DESIGN ENGINEER

STANDARD PLAN  
5-297.407

1 OF 1

STANDARD PLAN

STATE PROJ. NO.  
TRUNK HWY.

SHEET NO.  
TOTAL SHEETS