



STRUCTURE CALCULATIONS

For Needs Purposes

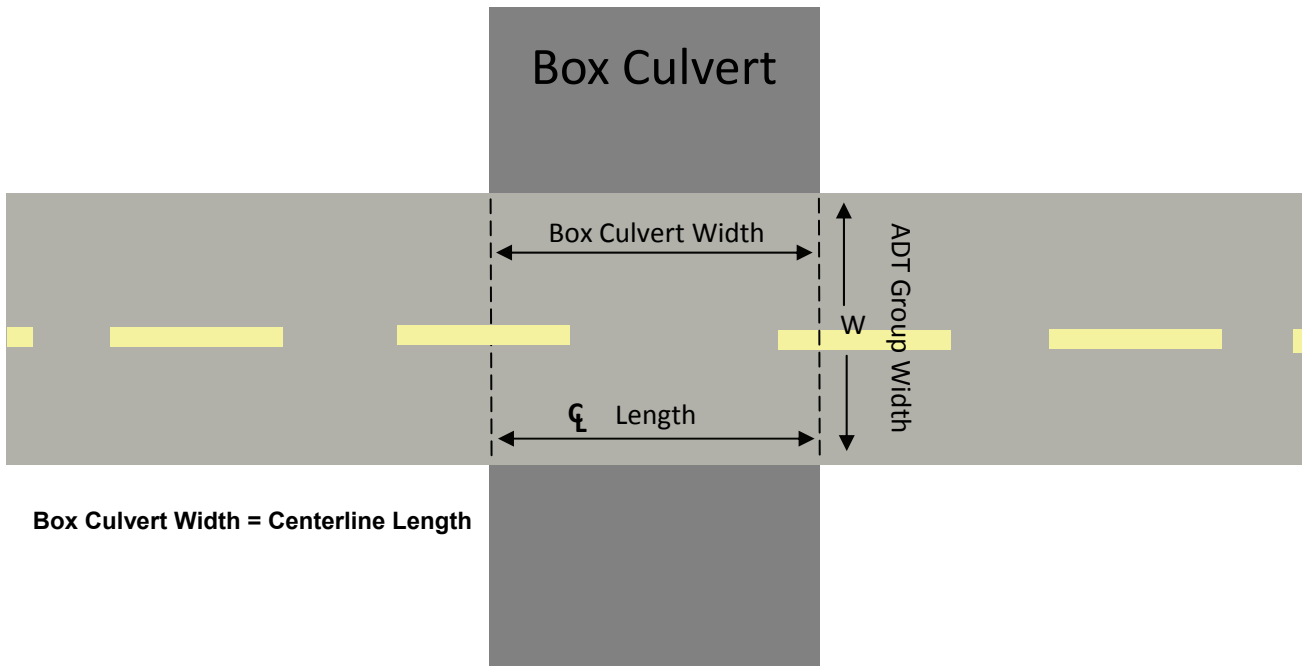

FORMULA FOR BOX CULVERTS AND BRIDGES (applies to both) =

CENTERLINE LENGTH x ADT GROUP WIDTH (auto calculated) x UNIT COST

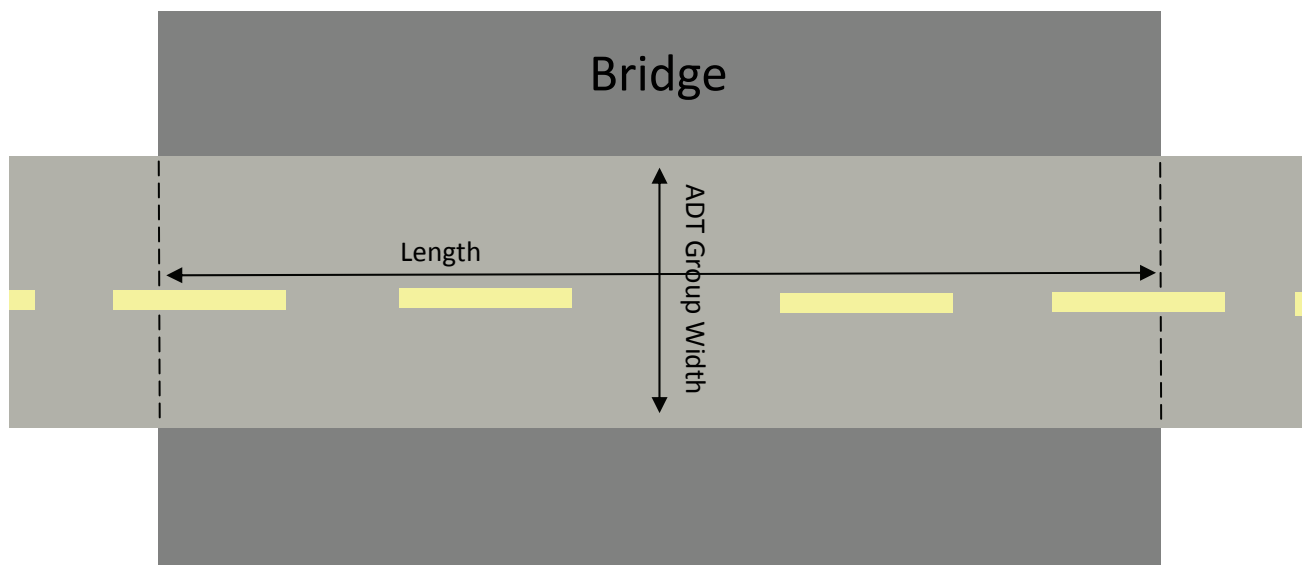

Bridge Length = Centerline Length